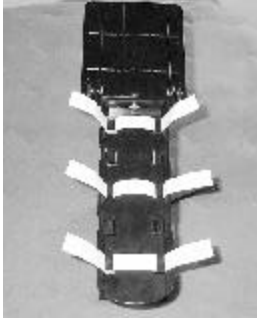
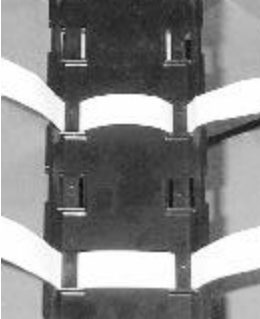


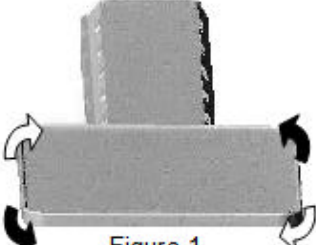
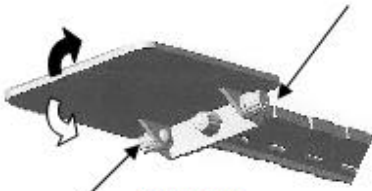
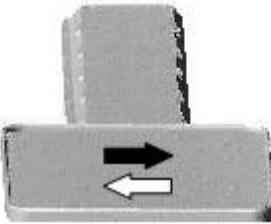
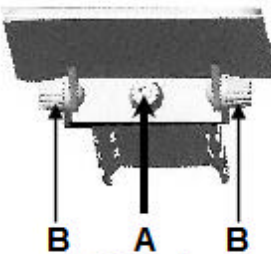


ERGO NAV Mounting and Adjustment Instructions

| | | | |
|--|---|---|---|
|  <p>(Bottom View)</p> | <h3>STEP 1</h3> <p>Route Velcro straps through the slots as shown in photo 1. See close-up photo 1A.</p> |  <p>(Bottom View)</p> | <h3>STEP 1A</h3> <p>The rough side of the Velcro should be facing you as shown in this photo.</p> |
|  | <h3>STEP 2</h3> <p>Position the non-skid strip on the armrest on which you will attach your ERGO NAV.</p> |  | <h3>STEP 3</h3> <p>Place the ERGO NAV on top of the armrest as shown. Pull the straps tight around the armrest securing the Velcro ends together.</p> |

ERGO NAV Adjustments

The platform of the ERGO NAV can be adjusted to suit your comfort needs. The illustrations below show the adjustments that the ERGO NAV is capable of.

| | | |
|---|---|--|
|  <p>Figure 1 (Side To Side Tilt)</p> |  <p>Figure 2 (Up and Down Tilt)</p> |  <p>Figure 3 (Side to Side Shift)</p> |
|  <p>Figure 4</p> | <p>Side to side tilt shown in figure 1 is accomplished by loosening the knob labeled "A" in in figure 4. The tilting shown in figure 2 requires loosening the knobs labeled "B" in figure 4. The adjustment shown in figure 3 requires the removal of knob "A" and reattaching the platform with one of the mounting holes next to knob "A". Knobs must be loosened before any adjustments are made and re-tightened prior to use. The ERGO NAV's platform should be tilted slightly downward and away from your seating position.</p> | |

CAUTION: Never force the mouse platform into position. Loosen, adjust and tighten the adjustment point(s) as needed. Never put unnecessary downward force on the platform.